## Division of Fleet and Surplus Services 3,000 mile required PM schedule

Miles Suggested preventive maintenance services Miles Suggested preventive maintenance services

3,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure	39,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure
6,000	Change oil and filter, lube chassis as equired, check and fill all fluid levels, check tire pressure, rotate tires, check brake linings	42,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure, rotate tires, check brake linings
9,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure	45,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure, replace air filter, replace fuel filter, service transmission
12,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure, rotate tires, check brake linings	48,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure, rotate tires, check brake linings
15,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure, replace air filter if necessary, replace fuel filter	51,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure
18,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure, rotate tires, check brake linings	54,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure, rotate tires, check brake linings
21,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure	57,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure
24,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure, rotate tires, check brake linings	60,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure, replace air filter, replace fuel filter, service automatic
27,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure	63,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure
30,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure, rotate tires, check brake linings, replace only non-platinum spark plugs replace air filter, replace fuel filter, service transmission, replace emission filters, FWD only - repackrear wheel bearings, RWD only - repack front wheel bearings	66,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure, rotate tires, check brakelinings
33,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure	69,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure
36,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure, rotate tires, check brake linings	72,000	Change oil and filter, lube chassis as required, check and fill all fluid levels, check tire pressure, check tire pressure, check brake linings

## Miles Suggested preventive maintenance services Miles Suggested preventive maintenance services

75.000	Change oil and filter lube about = ==	00.000	Change oil and filter lube aboosis
75,000	Change oil and filter, lube chassis as	99,000	Change oil and filter, lube chassis as
	required, check and fill all fluid levels,		required, check and fill all fluid levels,
	check tire pressure, replace air filter,		check tire pressure
70.000	replace fuel filte, service transmission	400.000	Ohanna all and filter to be about a
78,000	Change oil and filter, lube chassis as	102,000	Change oil and filter, lube chassis as
	required, check and fill all fluid levels,		required, check and fill all fluid levels,
	check tire pressure, check tire pressure,		check tire pressure, rotate tires, check
04.000	check brake linings	405.000	brake linings
81,000	Change oil and filter, lube chassis as	105,000	Change oil and filter, lube chassis as
	required, check and fill all fluid levels,		required, check and fill all fluid levels,
	check tire pressure		check tire pressure, replace air filter,
			replace fuel filter, service transmission
84,000	Change oil and filter, lube chassis as	108,000	Change oil and filter, lube chassis as
	required, check and fill all fluid levels,		required, check and fill all fluid levels,
	check tire pressure, rotate tires, check		check tire pressure, rotate tires, check
	brake linings		brake linings
87,000	Change oil and filter, lube chassis as	111,000	Change oil and filter, lube chassis as
	required, check and fill all fluid levels,		required, check and fill all fluid levels,
	check tire pressure		check tire pressure
90,000	Change oil and filter, lube chassis as	114,000	Change oil and filter, lube chassis as
	required, check and fill all fluid levels,		required, check and fill all fluid levels,
	check tire pressure, rotate tires, check		check tire pressure, rotate tires, check
	brake linings, replace oonly non-platinum		brake linings
	spark plugs, replace air filter, replace fuel		
	filter, service transmission, replace		
	emission filters FWD only - repack rear		
	wheel bearings RWD only - repack front		
	wheel bearings		
93,000	Change oil and filter, lube chassis as	117,000	Change oil and filter, lube chassis as
	required, check and fill all fluid levels,		required, check and fill all fluid levels,
	check tire pressure		check tire pressure
96,000	Change oil and filter, lube chassis as	120,000	Change oil and filter, lube chassis as
	required, check and fill all fluid levels,		required, check and fill all fluid levels,
	check tire pressure, rotate tires, check		check tire pressure, rotate tires, replace
	brake linings		air filter, replace fuel filter, service
	-		transmission